Australia Post - Connectivity - Universal USB Impulse Bin Divider

Important installation instructions – Read before use.

This unit is designed to suit all versions of the timber Impulse bins supplied between 2001 and 2019

Important !!

The acrylic units supplied have a perforated snap off section on all edges.

Do not snap these features off until you have established which way the timber base fits into your impulse bin.

Step 1. Unwrap your package and carefully remove all white face protection from the acrylic components.

Step 2. Read all material including these instructions carefully.


Step 3. Remove all existing stock from your impulse bin and ensure that existing timber base clear of all debris.


Step 4. Adjust the height of the existing timber insert to endure that it is at least 18cm below the top edge of the bin.

Step 5. Place the timber panel supplied as part of your kit into the bin and <u>rotate to either</u> of the positions shown in Fig 1. & Fig 2. It should be a snug fit and not able to slide around freely.

Step 6 If the position of the timber base matches the S2001 orientation shown in Fig 1. then you will need to "Snap off" the small acrylic tabs on all 4 sides of the acrylic unit. If it matches the orientation shown in Fig 2. then no modification of the acrylics components is required. – DO NOT SNAP OFF THE ACRYLIC TABS UNITL YOU ARE COMPLETELY SURE WHICH STYLE OF BIN YOU HAVE.

Step 7. Locate the "Acrylic Cross Support" and insert the tabs on the base into the slots in the "MDF Timber base" as shown Fig 3,4&5 **Step 8**. Gently slide the Acrylic ticket holder at right angles to the Acrylic cross support as shown in Fig 3. & Fig 4 & Fig 5

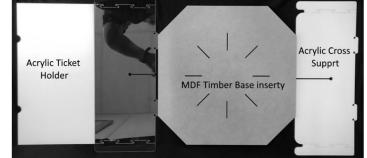

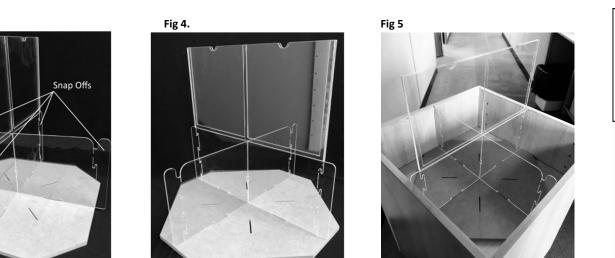

Step 9. Insert card signage into the acrylic ticket holders and re merchandise as per the relevant promotion or planogram.

Note:

Fig 3.

Ausfab Plastics Australia as the supplier of these items will not be responsible for items damaged in transit by Australia Post 3PL provider Ausfab Plastics Australia as the supplier of these items will not be responsible for damage caused by a failure to follow the instructions provided with each unit.

Fig 1. S2001 Grey Dump Bins timber base orientation. NOTE: Removal of acrylic "Snap Off" ends required before installation.


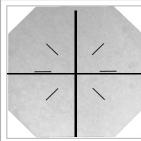


Fig 2. S2006/7/12/18 Timber & White colour Dump Bins timber base orientation. NOTE: Removal of acrylic "Snap Off" ends <u>NOT</u> required before installation.

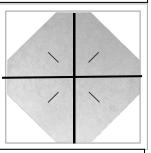

Supplied by Ausfab Plastics Australia Pty Ltd 50 Nevin Drive Thomastown Vic 3074 Ph 03 9466 4422 FAX 03 9466 4841 Email: sales@ausfab.com.au